


ZENIT  
design GI-RA




**antoniolupi**



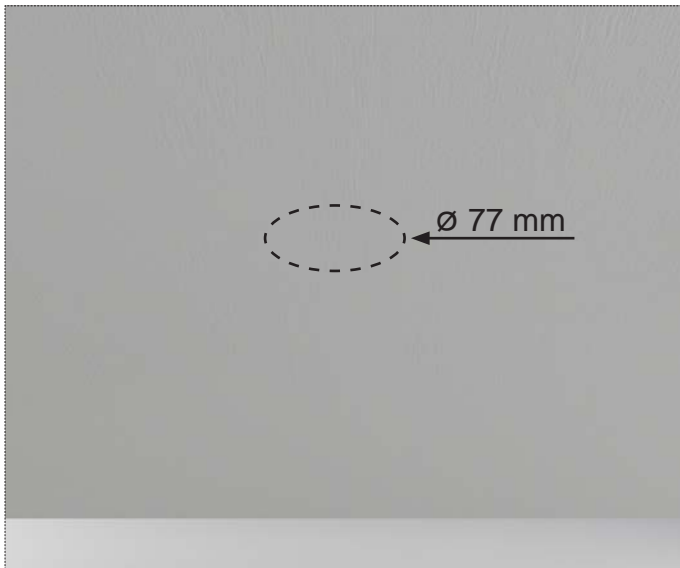

1\_cut a hole in the suspended ceiling.

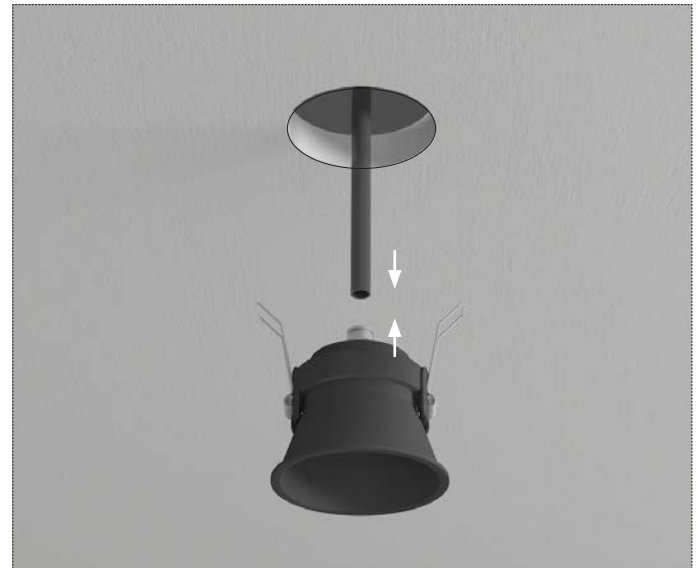

2\_ Connect the water pipe to the showerhead making sure that it is firmly inserted.



3\_Insert the showerhead by moving the two docking levers upwards.



4\_Gently release the two fixing levers, thus blocking the showerhead to the suspended ceiling.



5\_ To inspect the cartridge with nozzles, use the key supplied to unscrew it from the body of the showerhead, after maintenance has been completed reinsert the cartridge by screwing it in using the appropriate key.

NOTES

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

**antoniolupi**

**73**

VIA MAZZINI

**75**

Antonio Lupi Design S.p.A.  
via Mazzini 73/75 - 50050 Stabbia  
Cerreto Guidi (Firenze) - Italy  
T +39 0571 586881\_95651  
F +39 0571 586885  
[www.antoniolupi.it](http://www.antoniolupi.it)  
[lupi@antoniolupi.it](mailto:lupi@antoniolupi.it)